



sargent & greenleaf™

# I-SERIES TOUCHSCREEN KEYPAD

Model ISR101-XXX, ISR102-XXX

Compatible with S&G lock models:  
6120, 6123, 6124, 6125, 1006, 2006




## RECOMMEND INSTALLATION GUIDE

## I-SERIES KEYPAD

### WHAT'S IN THE BOX

Item	Quantity	Description
1	1	Keypad housing / display
2	1	Keypad base / battery compartment
3	4	AA Duracell batteries
4	4	Mounting screws (2 standard & 2 metric)
5	1	Cover locking screw

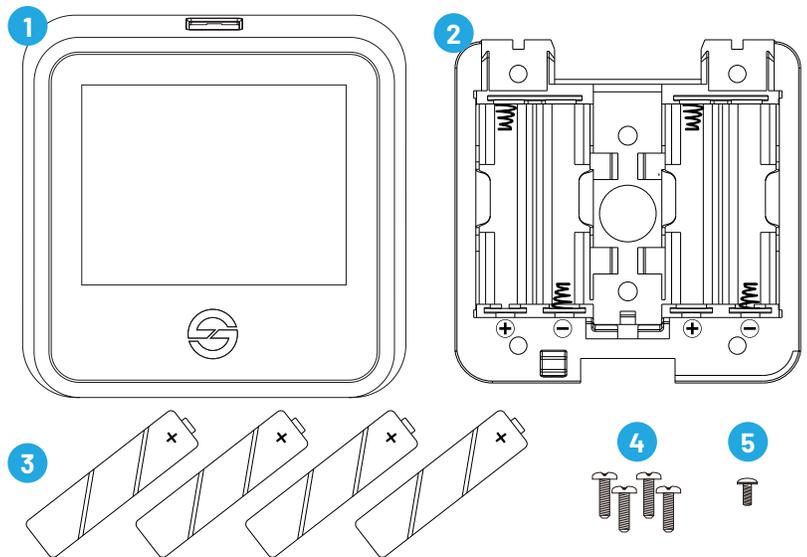


**INSTALLATION PROCEDURES** – Follow steps 1-6

**REPLACING THE BATTERIES** – Follow steps 7-12


**PAIRING CODE INFORMATION** – Follow step 13

### INSTALLATION PROCEDURE




**1.** If this is a retrofit installation, remove the existing keypad from the front of the container. Carefully pass the lock cable through the spindle hole.

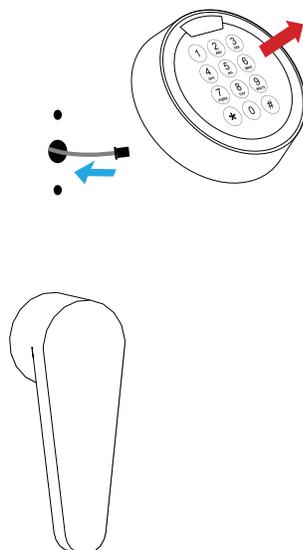



**2.** Remove the keypad base from the box and carefully pull the lock cable through the hole in the middle of the keypad base. Using the appropriate standard or metric screw thread, secure the bottom screw to mount the base to the front of the safe. Please note that the keypad base should be oriented so that the snap and the black & red power wires are at the bottom of the base.

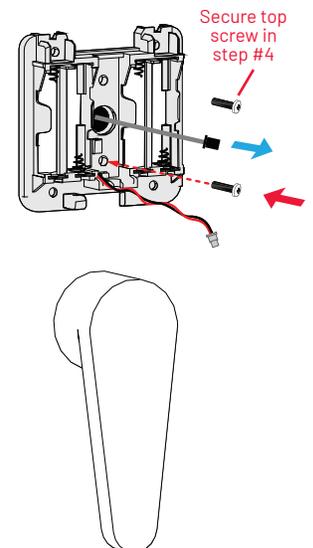

**3.** After securing the keypad base to the door, place 4AA 1.5V batteries (S&G recommends Duracell Procell) into the battery compartment in the keypad base. Please make sure to follow the polarity of each battery before inserting them into the keypad base.

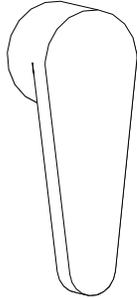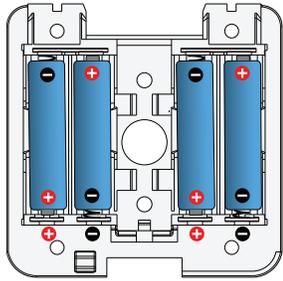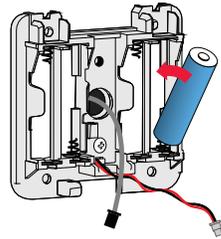


**4.** Using the remaining mounting screw, carefully connect the keypad housing's green grounding wire to the top of the keypad base plate. Rotate the green wire to the bottom position of the screw and secure. Slide the clear protective sleeve as close to the screw as possible. Next carefully connect the battery cable from the keypad base and the lock cable to the keypad housing. Both connectors are "keyed", so they will only connect one way. Make sure that the connections are secure.

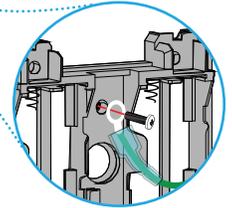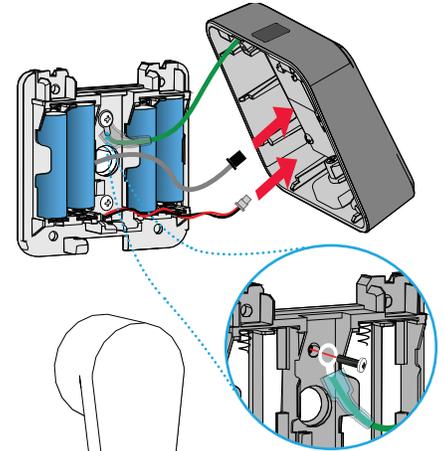


**Important Note:** Ensure the protective sleeve covers the metal connector if the ground wire is not being used.

**5.** A) Secure the housing onto the base. The top of the keypad housing should slide into the top of the keypad base. The bottom of the keypad housing should then be pressed onto the base until the bottom latch engages.

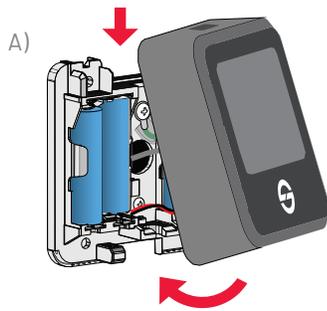

B) Lock the housing in place by adding a securing screw to the left of the bottom release latch.

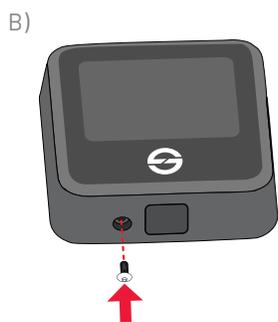

**6.** Your keypad should now be ready to use. Simply touch the keypad screen to turn it on.



**Important Note:** The I-Series operates with the existing safe lock combination. If already programmed simply enter your combination and press # to open the lock.

If a combination needs to be changed or entered your standard combination change instructions for the lock model you have will be utilized.

Access to our lock programming instructions can be located at: [iserieskeypad.com](http://iserieskeypad.com)


For questions regarding this product, contact:  
**Sargent and Greenleaf, Inc.**  
 One Security Drive  
 Nicholasville, KY 40356  
 Ph: **(800) 826-7652**  
 Website: [sargentandgreenleaf.com/support](http://sargentandgreenleaf.com/support)




## REPLACING THE BATTERIES

When the batteries are low and need to be replaced, the keypad will emit low battery beeps and the battery meter will be shown as red on the display. The keypad requires four AA, 1.5V batteries and any replacement batteries should be Duracell.


**7.** A) Remove the bottom securing lock screw to the left of the release button. B) Press the release button to detach the keypad housing.

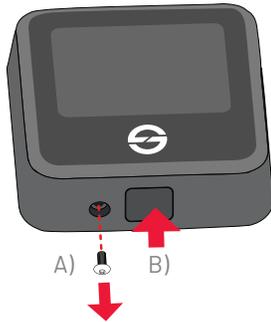

**8.** Carefully lift the keypad housing away from the base. Please note that the keypad housing raises up from the bottom.

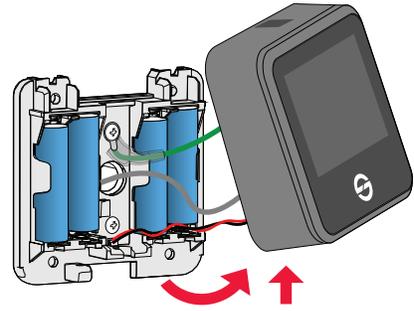


**9.** Carefully remove the lock cable and the battery cable from the keypad housing. The keypad will remain secured to the base via the green grounding wire. Batteries will be accessible but if more room is required, remove the green wire's mounting screw from the base and carefully set the housing aside in a safe place.

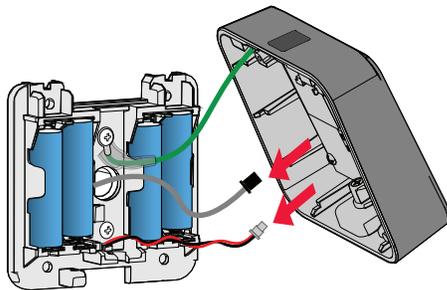


**10.** Remove the batteries from keypad base and replace them with four fresh batteries. Please note that all four batteries should be replaced at the same time.


Uses 4 AA, 1.5V batteries  
(S&G recommends Duracell Procell)

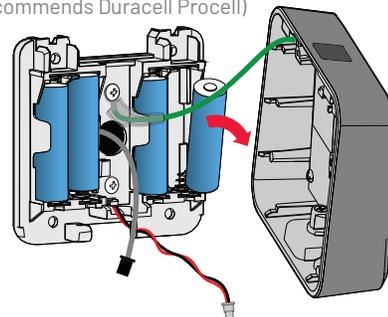



**11.** Carefully re-connect the battery cable from the keypad base and the lock cable into the keypad housing. Both connectors are "keyed", so they will only connect one way. Make sure that the connections are secure.

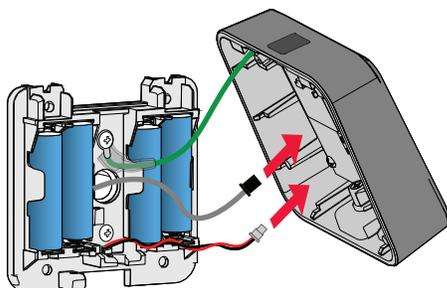

**12.** A) Carefully secure the keypad housing back onto the base. The top of the keypad housing should slide into the top of the keypad base. The bottom of the keypad housing should then be pressed onto the base until the bottom latch engages. B) Lock the housing in place with the securing screw to the left of the bottom release latch.

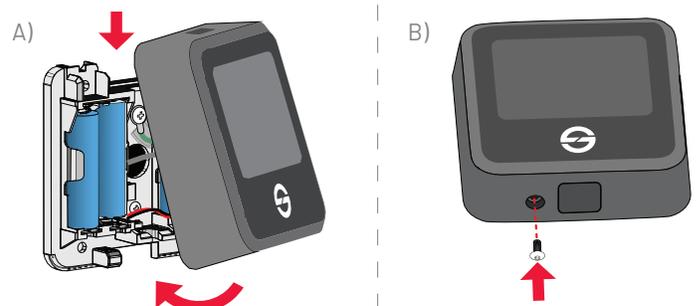

**13.** To connect the I-Series Keypad via Bluetooth® requires an 8 digit pairing code. The I-Series unique pairing code can be found printed on the microchip label located in the back of the display housing. Locate the microchip with the QR code and capture the code on the right as shown in the illustration.

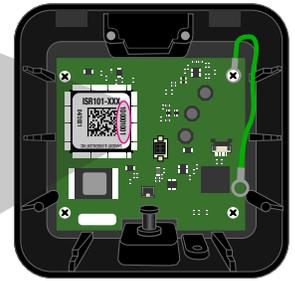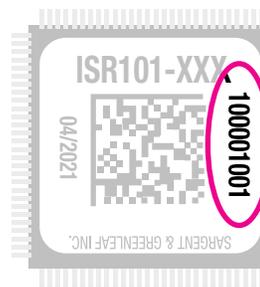

To control your lock remotely download the **Sargent and Greenleaf I-Series Keypad Control App** from the App Store and Google Play.



Record Your Keypad's Paring Code Here:

\_\_\_\_\_

**ADDITIONAL INFORMATION**

**AGENCY COMPLIANCE NOTE**

ALL VdS, A2P, SBSC, & EN1300 Certifications will not be valid when this type of keypad is connected to an S&G lock. This keypad utilizes advanced communication features that are not currently permitted by some security standards and/or Certification Bodies. To maintain Certifications, ensure that an appropriately approved Sargent & Greenleaf keypad is paired with the lock body. Contact your Sargent and Greenleaf sales representative for details.

The audit features, peripheral devices and accessories, software features, one-time code functionality, USB functionality, wireless functionality, remote functionality, Bluetooth functionality and other additional features are beyond the scope of the UL 2058 standard and not part of the UL Listing.

**FCC COMPLIANCE STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To comply with FCC's and Industry Canada's RF radiation exposure limits for general population/uncontrolled exposure, this device must be installed to provide a separation distance of at least 20cm from all persons. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sargent and Greenleaf, Inc. is under license. Other trademarks and trade names are those of their respective owners.

